


**12V FAN ADAPTOR
WITH RPM SENSOR
WIRING DIAGRAM
[REVISED: 3/14/2007]**

**4-WIRE FEMALE
PERIPHERAL
POWER PLUG**

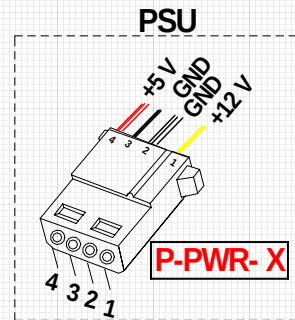

ADAPTER CABLE CONNECTIONS

1. CONNECT PSU PLUG [P-PWR-X] TO ADAPTER CABLE PLUG - [P-FANPWR-IN]
2. CONNECT CPU FAN MINI PLUG [P-FANPWR-] TO ADAPTER CABLE PLUG [J-FANPWR-I]
3. CONNECT ADAPTER MINI PLUG [P-FANRPM-] TO MOTHERBOARD CONNECTOR [J-CPU FAN1]


**PASS THRU FEMALE
PERIPHERAL POWER
CONNECTOR**

**FOR ADDED CPU FAN PROTECTION
RECOMMEND DO NOT USE**

P-FANPWR- IN
MATES WITH FEMALE
PERIPHERAL POWER

**MOBO MINI 3-PIN
FAN CONNECTION**

P/O Motherboard

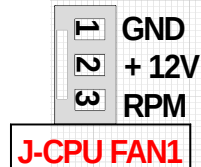

**P-FAN RPM
SENSOR**

J-FANPWR

P-FANPWR

CPU FAN



**M/W +12V FAN 3-PIN
MINI CONNECTOR**